
## **RK3588 upgrade instruction**

1. Install the upgrade tool "RKDevTool\_Release\_v2.84"; and also please install the driver (if it is your first time use, please install the driver first);



2. Open the upgrade tool, and select the firmware (.img file) directory:



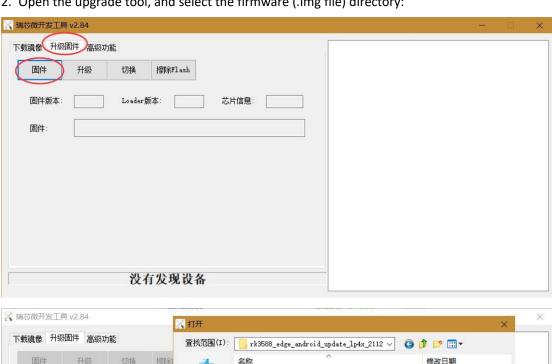

3. And then connect the device Type-C to PC USB, and also connect the DC power 12V to the device.



4. And press and hold the recover button nearby the USB 3.0 port; And then press one time the reset button nearby the USB2.0 port; and then you can see the message "found a LOADER device"





5. And then press "upgrade" to process the upgrade, and on the right side can see the upgrade process till 100% when it is finished.



